



SIM Card Holder



LED1



LED2



LED3



LED4



LED5



LED6

## LED6 Java Status

Off	
On	
Flashing	

Terminal is rebooting, other LEDs are meaningless  
 Terminal is rebooting, other LEDs are meaningless  
 Java is Running, observe the other LEDs for more information

If LED 6 is flashing in green, also pay attention to LED 1-5:

LED1	
Off	
Flashing	
On	

No SIM Card  
 Waiting for PIN, or WRONG PIN  
 SIM inserted and unlocked

LED2	
Off	
Flashing	
On	

GSM not booked in(registration denied) or no signal  
 Bad signal quality, change the antenna  
 Terminal is registered to GSM, good signal quality

LED3	
Off	
Flashing	
On	

GPRS Registration Failed, No IP Received  
 IP Received, but connection to server failed  
 Terminal is conneted to server

LED4	
Off	
Flashing	
On	

No MFP connected or MFP is off or in sleep mode  
 MFP detected but not registered to CSRC  
 MFP detected and registered to CSRC

LED5	
Off	
Flashing	
On	

No alert, everything is fine  
 Wrong registration, contact CSRC Administrators  
 MFP lost , Turn off/on the MFP